


## Exclusive Profile Hinge Adjustment Instructions

## Adjusting the height

Support the door before making any adjustments




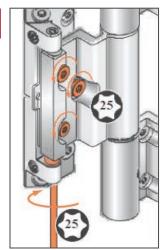

Loosen the adjustment screws on the door hinge blades on all hinges, loosen bottom set screws (approx. 3 turns)






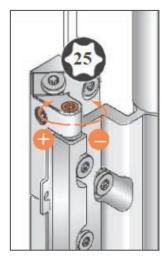

Adjust the height  $\pm$  3 mm by using the upper set screw. Important: The lower hinge supports the door.



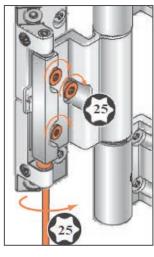

Tighten adjustment screws on the door hinge blades and bring the set screw into position.




## Exclusive Profile Hinge Adjustment Instructions

## Horizontal adjustment

Support the door before making any adjustments




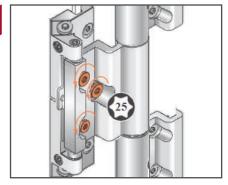

Loosen adjustment screws.






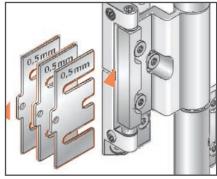


Remove spacer plates (3 x 0.5 mm).



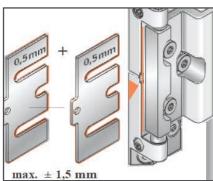

Combine the required number of spacer plates (each 0.5 mm) Adjustment of  $\pm$  1.5 mm possible in 0.5 mm increments.



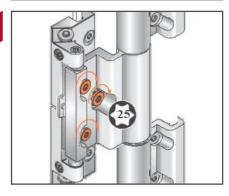

Tighten adjustment screws (4 – 6 Nm).